


ST Adapter

An optical fibre adapter or uniter is used to mate two connectors together, usually mounted in a distribution panel or wall box. In most cases it is the critical part of the system that aligns the ferrule part of the connectors keeping the fibres in perfect alignment.

Generally there are two types of alignment sleeve within an adapter, phosphor bronze for multi-mode or zirconia (ceramic) for single mode.

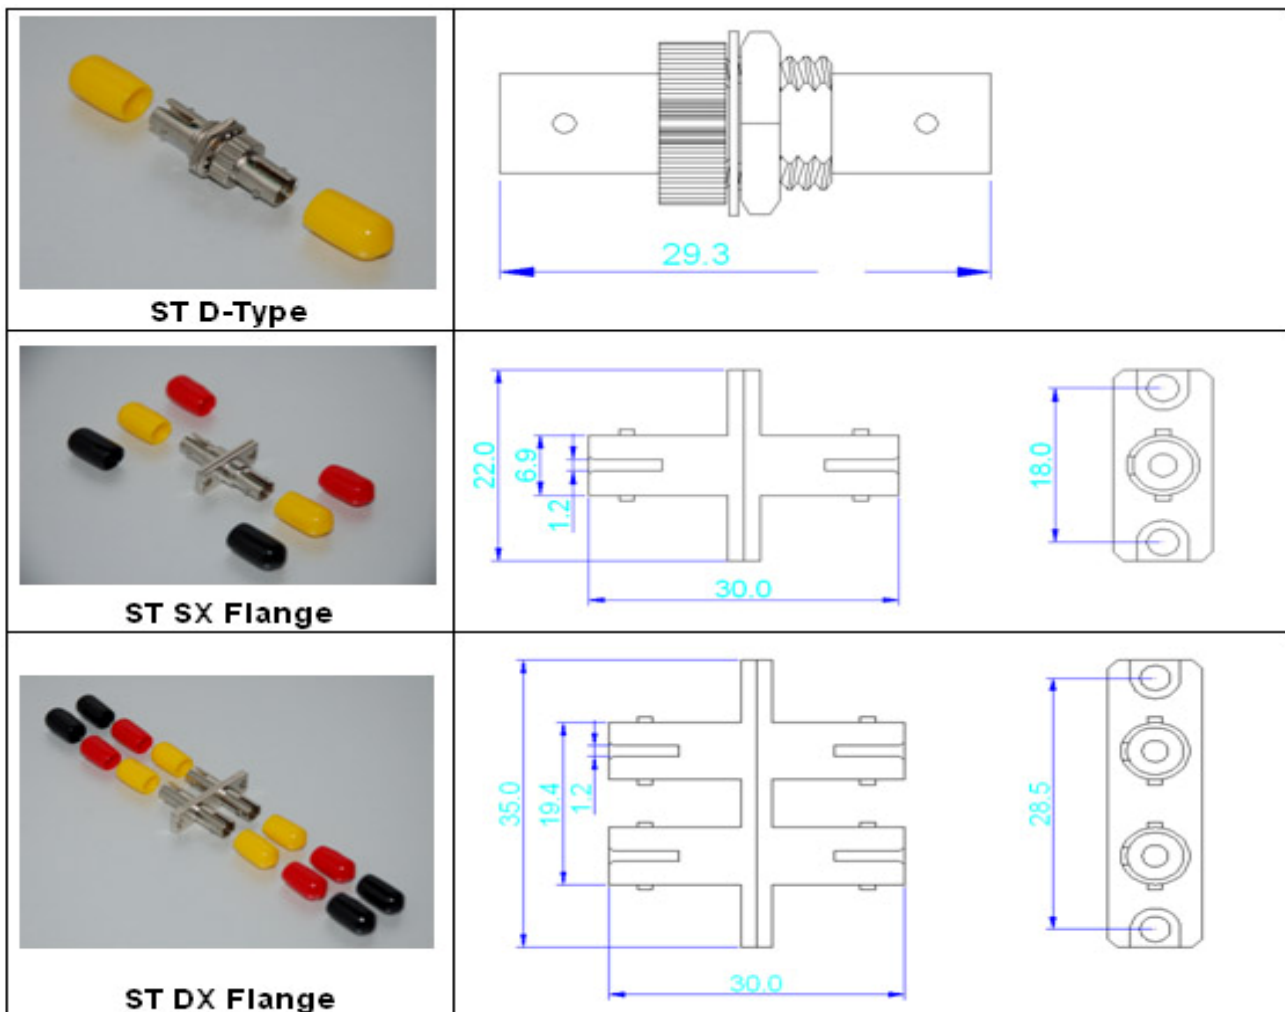

Ordering Information

Type	Body Type	Body Material or Color	Dust cap Color
1020 — 33 — <input type="text"/>	<input type="text"/>	<input type="text" value="02"/>	<input type="text"/>
S : SM	SD: Sx D-type	02: Zinc Alloy	YE : Yellow (For SM)
M : MM	SF: Sx Flange		BK : Black (For MM)
	DF: Dx Flange		

