


ST Adapter

An optical fibre adapter or uniter is used to mate two connectors together, usually mounted in a distribution panel or wall box. In most cases it is the critical part of the system that aligns the ferrule part of the connectors keeping the fibres in perfect alignment.

Generally there are two types of alignment sleeve within an adapter, phosphor bronze for multi-mode or zirconia (ceramic) for single mode.

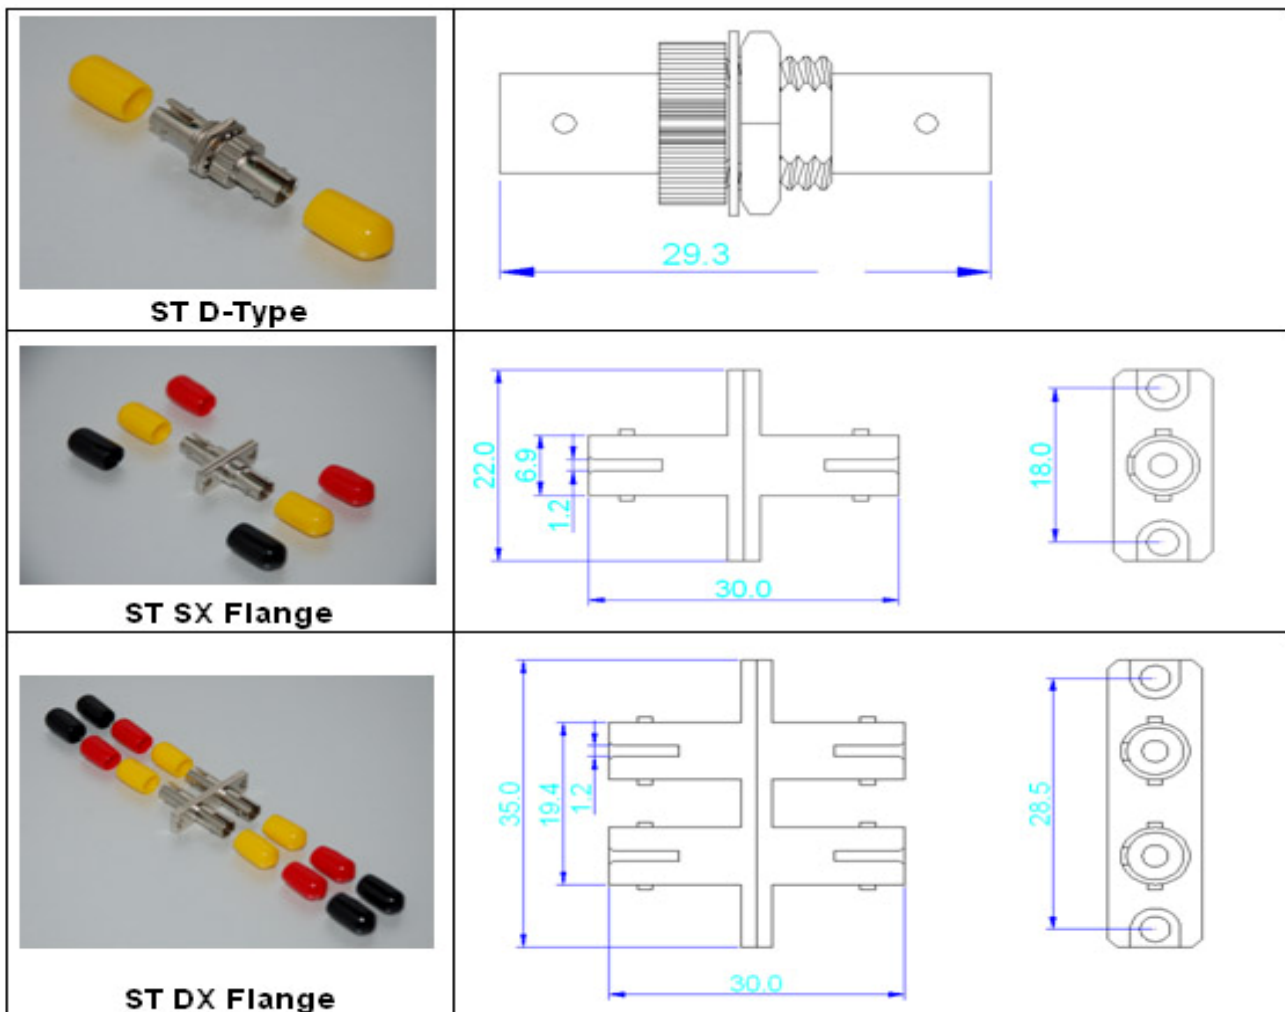

Ordering Information

Type		Body Type	Body Material or Color	Dust cap Color
1020	— 33	—	— 02	—
S	:	SD	:	YE
M	:	SF	:	BK
	:	DF	:	

SM : Single Mode
 MM : Multi Mode
 SD : Sx D-type
 SF : Sx Flange
 DF : Dx Flange
 02 : Zinc Alloy
 YE : Yellow (For SM)
 BK : Black (For MM)

